

TIX CLOCK



1 2 : 4 5

Thank-you for purchasing the TIX clock. The TIX clock has 4 digit fields like a regular digital clock, but the time is indicated by the *number* of lights in each digit field.

When the TIX clock is first plugged in, it displays the word "TIX" for 2 seconds, then defaults to displaying the time 12:34 with the display changing every 4 seconds. TIX is now in its normal "run" mode.

The TIX clock features three display update modes where the pattern displayed is changed every second, every 4 seconds or every minute. In addition, the brightness level of the display may be adjusted.

The back of the clock has 2 buttons labeled "Mode" and "Increment". Use these 2 buttons to adjust the time and brightness setting.

Setting the Time

- Step 1: Press the "Mode" button once. You will see the red and green Hours indicators flash. Press the "Increment" button repeatedly until the correct number of hours are displayed in the first two digit positions.
- Step 2: Press the "Mode" button again. You will see the blue tens-of-minutes indicators flash. Press the "Increment" button repeatedly until the correct number of tens-of minutes are displayed.
- Step 3: Press the "Mode" button again. You will see the red minutes indicators flash. Press the "Increment" button repeatedly until the correct number of minutes are displayed.
- Step 4: Press the "Mode" button again. ALL the digit fields will flash. TIX will now be in its "run" mode with time-keeping starting at zero seconds. Use this feature to start time-keeping right at the beginning of the displayed minute.

Setting the Brightness




When TIX is in its "run" mode, press the "Increment" button to cycle TIX through its brightness levels.

24 Hour Mode (Military Time)

Press and hold the Mode button when powering up the TIX clock. This sets TIX to 24 hour mode. The time now goes from 00:00 to 23:59.

Setting the Update Rate

Press and HOLD the "Mode" button for 2 seconds. All the indicators will go out except for one of the red indicators as shown below. Pressing the "Increment" button repeatedly will cycle through the different update modes:

| | |
|---|-------------------------|
|  | Update every second. |
|  | Update every 4 seconds. |
|  | Update every minute. |

Press "Mode" button to go back to normal "run" mode.

TIX CLOCK



CAUTIONS

TIX clock must be used with the recommended transformer (AC6V~1000mA)

TIX clock shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on it.

TIX clock ventilation should not be impeded by covering the TIX clock with items such as newspapers, table-cloths, curtains, etc

TIX clock is not intended for children under 3. The transformer is not a toy.

Do not clean the TIX clock with liquid. Clean with a soft cloth.



CUBE ROOT LABS

1669-2 Hollenbeck Ave #181
Sunnyvale, CA 94087-5402